

OMEGALARM by Radionics, Inc.

To disarm the system: Enter the code

To arm the system:

- 1) To leave – enter the code. The red light should begin flashing. This indicates your exit delay has begun.
- 2) To stay – Depress the lower right decimal button arms in the stay mode. The red light will illuminate on solid. Perimeter arming is instant. It has no exit delay, but may be programmed for entry delay. Perimeter arming permits a subscriber to automatically disarm interior traps while a premise is occupied, and still maintain perimeter protection at doors and windows.

Force Arming: The OMEGALARM will not arm if any of the controlled loops are faulted. This feature prevents the transmission of false alarms on closing.

To Silence after a Fire System: Depress the momentary button on the side of your control panel (probably mounted in a closet or garage) for 5 seconds.

TROUBLE SHOOTING

Keypad Buzzing

- 1) System buzzes during entry delay
- 2) A loop has been programmed to buzz on fault (i.e. a fire loop) and is in a faulted condition. May need a technician to find trouble in loop wiring.
- 3) Program memory data is incorrect, usually caused by the improper removal of the programmer. In this case, LED indicator lights will not shine at full brilliance.

Keypad Lights

Steady light – System is armed

Slowing flashing light – Prewarn (system is in the arming state)

Fast flashing light – System trouble (low battery, fail to communicate, etc)